 


Spare parts suitable for: **CAPITO**


Spare parts suitable for modular ranges

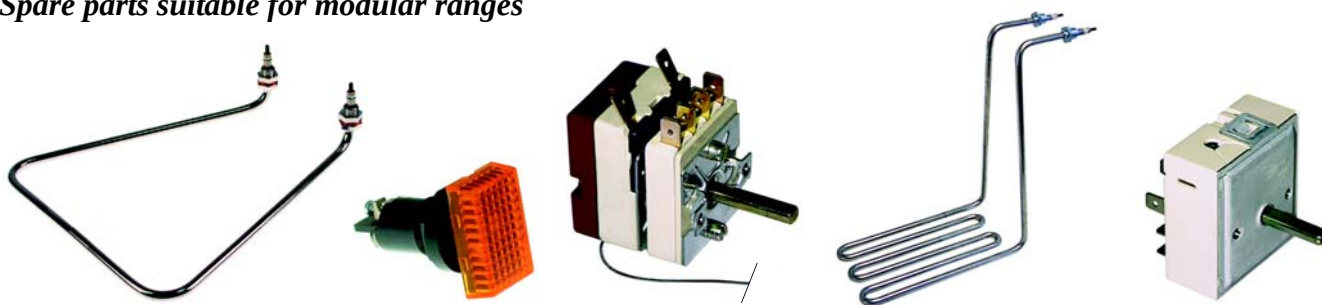

Open tops (electric)



Item	Order	Description	Model	OEM
1	490014	1500 W/230 V, Ø180mm	EK36-18/22	63889
1	490018	2000 W/230 V, Ø220mm		63890
2	490065	2000 W/230 V, 220x220mm	EK36-22/22	63887
2	490066	2600 W/230 V, 220x220xmm		63886
3	490054	2500 W/230 V, 300x300mm	EK38-30/30	63885
3	490074	4000 W/400 V, 300x300mm		63884

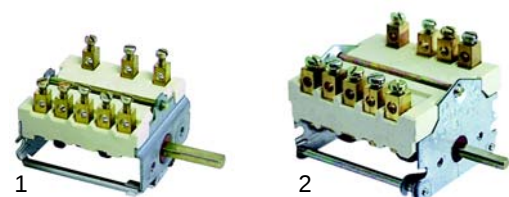 


Item	Order	Description	Model	OEM
1	300025	7-position switch, 16A	universal	63873
2	300106	7-position switch, 32A	EK38-30/30	63872



Item	Order	Description	Model	OEM
1	110189	knob	RB38, RB53	63907
2	110552	symbol		63922
3	359861	signal lamp/green		63922

 Fry tops/bratt pans (electric)

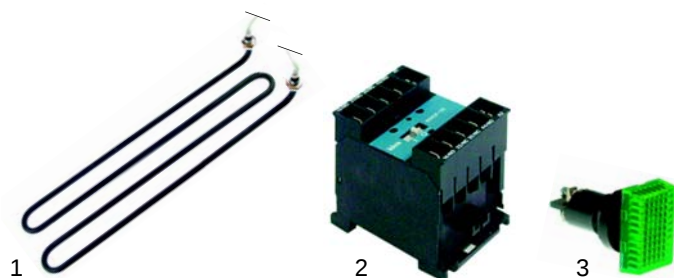


Item	Order	Description	Model	OEM
1	418268	2000 W/230 V	SGP36/53,	63853
2	380416	contactor	SGP70/102,	63906
3	359861	signal lamp/green	BP36/53	63922



Item	Order	Description	Model	OEM
1	380015	energy regulator	SGP36/53,	63867
2	110189	knob	SGP70/102,	63919
3	110551	symbol	BP36/53	

 Chargrills (electric)

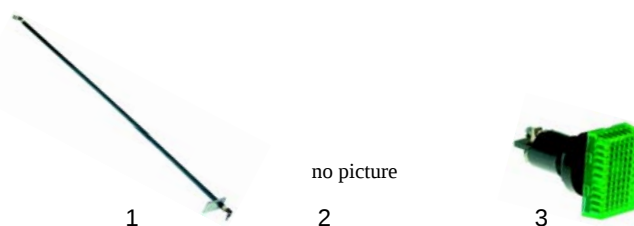


Item	Order	Description	Model	OEM
1	418261	330 W/230 V	RB38, RB53	63854
2	418264	700 W/230 V		63855
3	359861	signal lamp		63922



Item	Order	Description	Model	OEM
1	380015	energy regulator	RB38, RB53	63867
2	110189	knob		63919
3	110551	symbol		

 Bains-marie (electric)

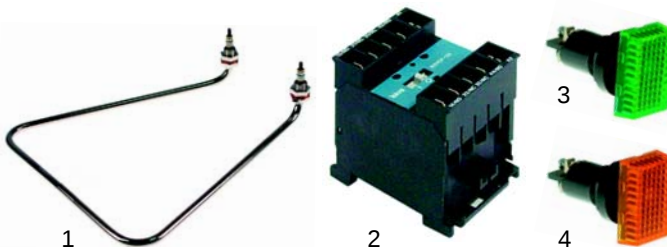

Item	Order	Description	Model	OEM
1	418250	1500 W/230 V	BM36,	63857
2	380416	contactor	BM53,	63906
3	359861	signal lamp/green	BM70,	63922
4	359860	signal lamp/yellow	BM102	63923

Thermal bridges (electrical)



Item	Order	Description	Model	OEM
1	375406	thermostat	BM36,	63862
2	110189	knob	BM53,	
3	111878	symbol	BM70,	63917
			BM102	



Item	Order	Description	Model	OEM
1	415102	400 W/230 V	WB	63851
2	301003	rocker switch, 2-pole		63871



Item	Order	Description	Model	OEM
1	300020	switch (0 - I), 2-pole	BM36, BM53, BM70, BM102	63870
2	300021	switch (0 - I), 4-pole		63869
3	110189	knob		63920
4	110542	symbol		



Item	Order	Description	Model	OEM
1	380015	energy regulator	WB	63867
2	110189	knob		63919
3	110551	symbol		

Chip scuttles (electric)




Item	Order	Description	Model	OEM
1	415104	1000 W/230 V	SB	63850
2	359861	signal lamp/green		63922



Item	Order	Description	Model	OEM
1	380015	energy regulator	SB	63867
2	110189	knob		63919
3	110551	symbol		

 Hot cupboards (electric)

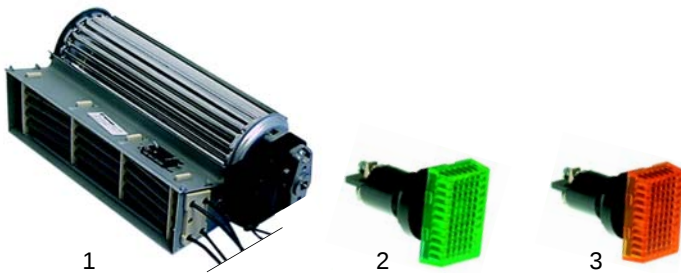


Item	Order	Description	Model	OEM
1	601027	fan with heating, 2x1000 W/230 V	309	63905
2	359861	signal lamp/green		63922
3	359860	signal lamp/yellow		63923



Item	Order	Description	Model	OEM
1	375406	thermostat, 110 °C	309	63862
2	110189	knob		63917
3	111878	symbol		

 
Fryers (electric)

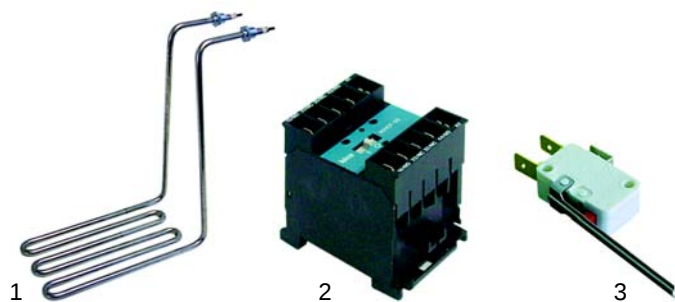

Item	Order	Description	Model	OEM
1	415740	3000W/230 V	universal	63852
2	380416	contactor		63906
3	345107	micro switch		63875



Item	Order	Description	Model	OEM
1	300020	switch (0 - I), 16A, 2-pole	universal	63870
2	300021	switch (0 - I), 16A, 4-pole		63869
3	300102	switch (0 - I), 32A, 4-pole		63868

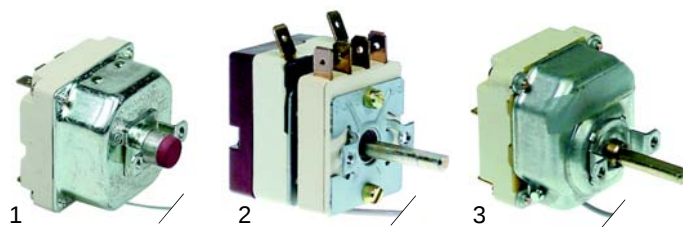 

Item	Order	Description	Model	OEM
1	375700	safety thermostat, 3-pole	universal	63860, 63864
2	375701	thermostat, 1-pole		63863
3	375713	thermostat, 3-pole		63859




Item	Order	Description	Model	OEM
1	110189	knob	universal	-
2	110542	symbol (0 - I)		-
3	110536	symbol		-




Pos.	Order	Description	Model	OEM
1	970442	fryer basket, 165x280x130mm	universal	63877

Single devices

 Stockpot stoves (electrical)

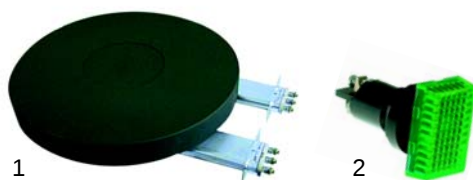

Item	Order	Description	Model	OEM
1	490103	5000W/400V	3111E	63883
2	359861	signal lamp/green		63922

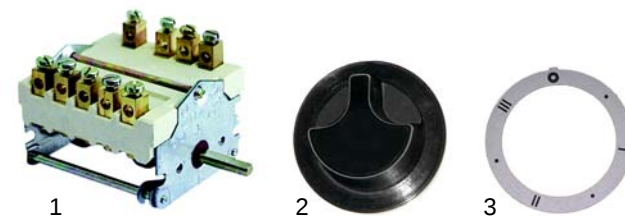 

Item	Order	Description	Model	OEM
1	300106	7-position switch, 32A	3111E	63872
2	110189	knob		63907
3	110552	symbol		