 


Spare parts suitable for: ***FABA***

Spare parts suitable for small appliances and single devices




Toasters

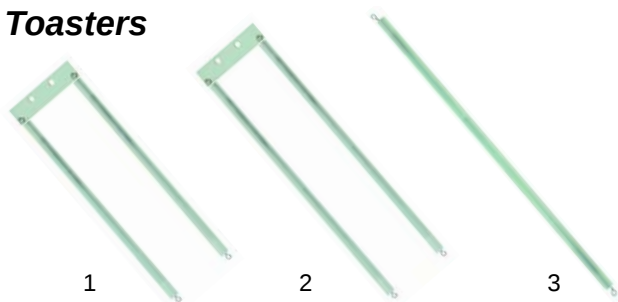

Item	Order	Description	Model	OEM
1	416142	800W/230V	P2/P4	P40004
2	416143	1000W/230V	P3/P6	P404/1
3	416144	300W/115	Maxigrill	PR4G015

 Contact grills

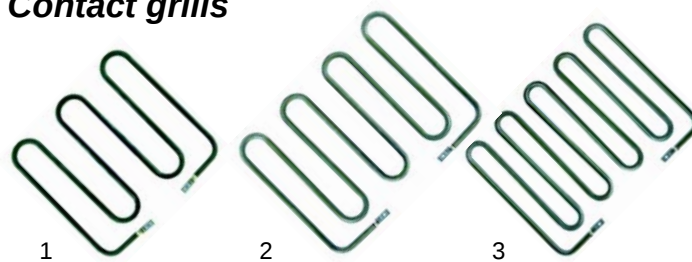


Item	Order	Description	Model	OEM
1	416145	1000W/230V (upper)	series „E“ series „S“	PR10003
2	416146	1200W/230V (upper)		PR103/1
3	416147	1500W/230V		PR103/2

F



Item	Order	Description	Model	OEM
1	345646	switch/lamp (combination)	P2/P3	PR40027
2	345647	switch (double)	Maxigrill	PR4G026
3	359140	signal lamp	P4/P6, Maxigrill	PR10010
4	390096	thermostat	P2/P3/P4/P6	PR40026

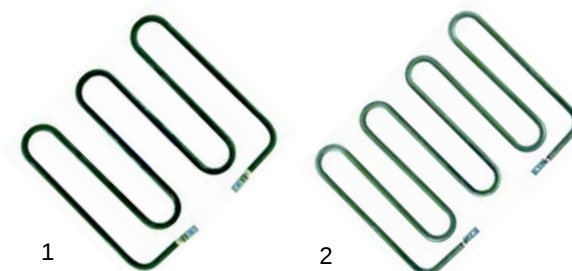 


Item	Order	Description	Model	OEM
1	416148	800W/230V (lower)	series „E“ series „S“	PR10013
1	416145	1000W/230V (lower)		PR10003
2	416146	1200W/230V (lower)		PR103/1




Item	Order	Description	Model	OEM
1	390187	safety thermostat	P2/P3/P4/P6, Maxigrill	PR10015
2	360149	timer		PR40014
3	110889	knob		PR40016




Pos.	Order	Description	Model	OEM
1	693047	insulating part		PR405/6 PR405/7

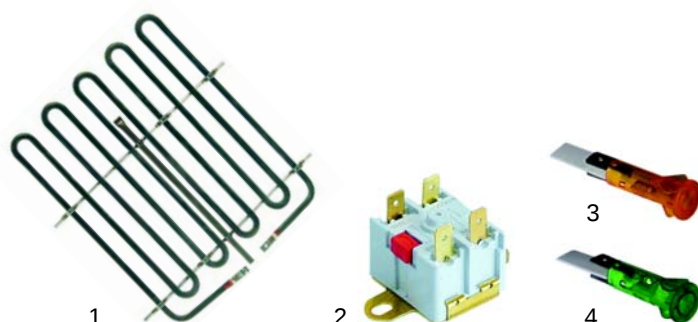 

Item	Order	Description	Model	OEM
1	416173	850W/230V (lower)	DLV, DLA	PR13007
2	390187	safety thermostat	series „E“/“S“, DLV, DLA	PR10015
3	359140	signal lamp		PR10010
4	359139	signal lamp		PR10006

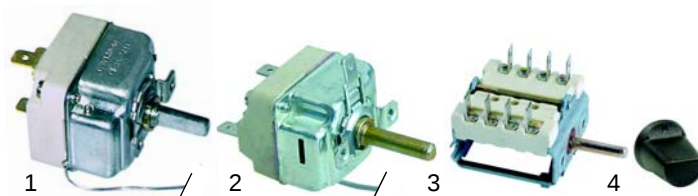 

Item	Order	Description	Model	OEM
1	375002	thermostat, 300°C	series „E“/“S“	PR10009
2	375253	thermostat, 480°C	ceramic DLV	PR13012
3	300124	switch	series „E“/DLV	PR10007
4	110374	knob	DLV, steel DLA	PR10008

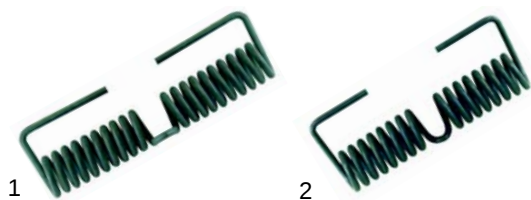 

Item	Order	Description	Model	OEM
1	700170	spring, 3,8mm	series „S“, DLA	PR10012
2	700171	spring, 3,2mm	series „E“, OLV	PR13032

Pancake devices (gas)



Item	Order	Description	Model	OEM
1	104288	burner cover		PR3G029
2	105086	burner ring	G400D,	PR3G030
3	105087	burner	G400S	PR3G031
4	104289	burner base		PR3G032




Item	Order	Description	Model	OEM
1	100009	piezoelectric igniter	G400D,	PR3G047
2	100167	electrode	G400S	PR3G033
3	102121	thermocouple		PR3G034




Item	Order	Description	Model	OEM
1	101687	thermostat		PR3G044
2	110377	knob	G400D,	PR3G048
3	101728	gasket	G400S	PR3G045
4	101479	supporting arm		PR3G046

 Pancake devices (electrical)

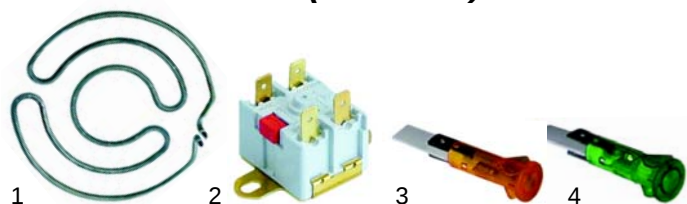


Item	Order	Description	Model	OEM
1	416636	2000W/230V		PR30001
2	390187	safety thermostat	D3S	PR10015
3	359140	signal lamp		PR10010
4	359139	signal lamp		PR10006

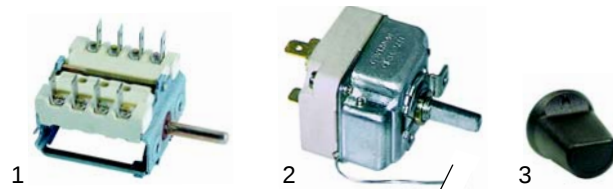 

Item	Order	Description	Model	OEM
1	300124	switch		PR10007
2	375002	thermostat, 300°C	D3S	PR10009
3	110374	knob		PR10008

 Fryers

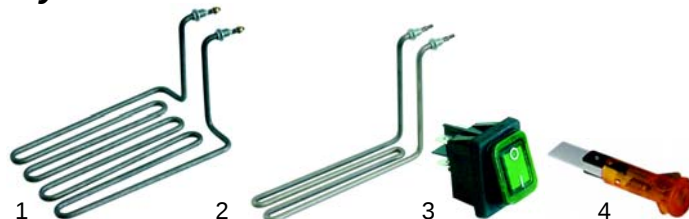

Item	Order	Description	Model	OEM
1	416150	2800W/230V	F4	PR70001
2	416151	1600W/230V	F6/F8	PR70002
3	345645	switch	F4, F6, F8	PR60008
4	359140	signal lamp		PR10010



Item	Order	Description	Model	OEM
1	345032	micro switch	F4, F6, F8	PR70011
2	375263	safety thermostat		PR70008
3	380213	contactor	F6T, F8T	PR70015



Item	Order	Description	Model	OEM
1	375264	thermostat	F4, F6, F8	PR70009
2	110374	knob		PR10008
3	550419	clamp		PR70044
4	550491	clamp		PR70042



Item	Order	Description	Model	OEM
1	970235	basket	F4	PR70003
2	970236	basket	F6, F8	PR70005
3	540747	drain tap	F6, F8	PR70014