 


Spare parts suitable for: **INOKSAN**


Spare parts suitable for small appliances and single devices




Conveyor belt toasters (electrical)

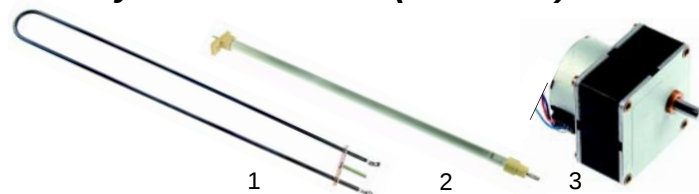


Item	Order	Description	Model	OEM
1	416860	500 W/230 V	PEK100	24407022
2	416861	290 W	PEK101	24417022
3	500605	motor	PEK100, PEK101	10130100

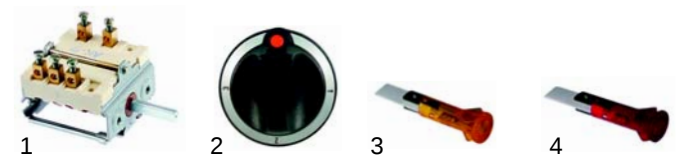 

Item	Order	Description	Model	OEM
1	300022	switch	PEK100, PEK101	10010303
2	111540	knob	PEK101	24016101
3	359140	signal lamp/yellow	PEK100	10080004
4	359138	signal lamp/red	PEK101	10080002

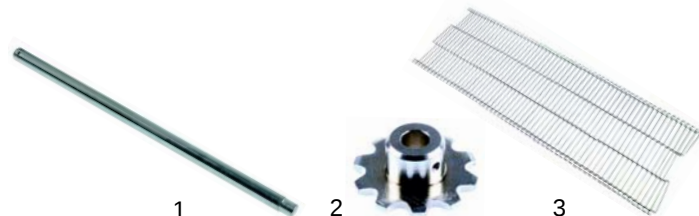 


Item	Order	Description	Model	OEM
1	693179	drive shaft	PEK100	24403023
2	693180	toothed wheel	PEK100	24403035
3	693181	conveyor belt	PEK100	24403052

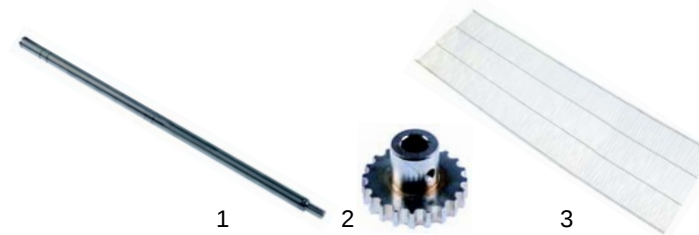 

Item	Order	Description	Model	OEM
1	693182	drive shaft	PEK101	24413023
2	693183	toothed wheel	PEK101	24413035
3	693184	conveyor belt	PEK101	24413052

 Hamburger warmers/chip scuttles (electrical)

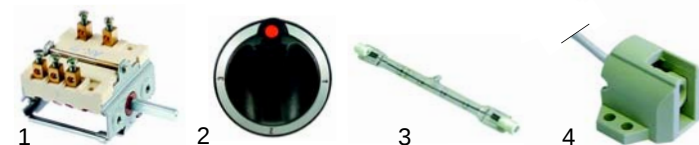


Item	Order	Description	Model	OEM
1	300022	switch	PMH100, PMP100	10010302
2	111540	knob	PMH100, PMP100	24016101
3	359620	halogen lamp	PMH100, PMP100	10080106
4	359649	base	PMH100, PMP100	10081001


Roller grills (electrical)



Item	Order	Description	Model	OEM
1	416862	600 W/230 V	PSK100	24307022
2	693185	pipe	PSK100	24303000
3	693186	seeger circlip ring	PSK100	13130025

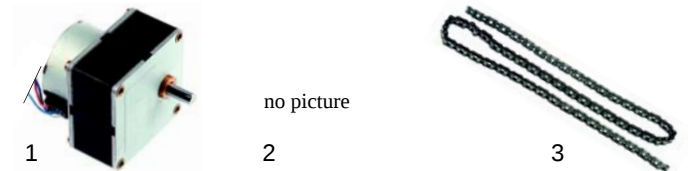 


Item	Order	Description	Model	OEM
1	500605	motor	PSK100	10130100
2	693187	toothed wheel	PSK100	24303006
3	693188	chain	PSK100	24303020

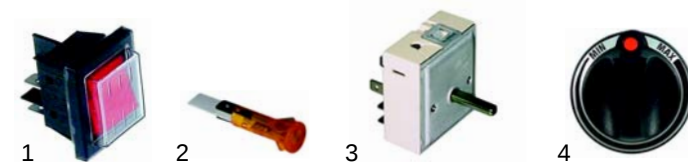 

Item	Order	Description	Model	OEM
1	301005	switch	PSK100	10010200
2	359140	signal lamp/yellow	PSK100	10080004
3	380015	energy regulator	PSK100	10091000
4	111551	knob	PSK100	24506020

 
Hot dog-machines (electrical)

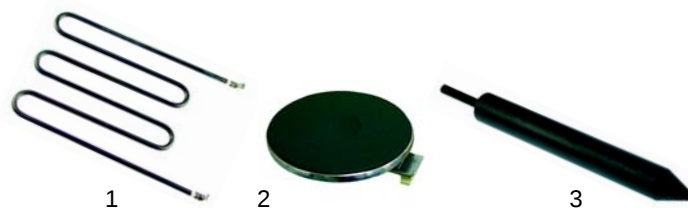


Item	Order	Description	Model	OEM
1	416863	1500 W/230 V	PSH100	24207022
2	490012	1500 W/230 V	PSH100	10071151
3	693189	aluminium skewer	PSH100	24203001



Item	Order	Description	Model	OEM
1	693190	glass	PSH100	24209022
2	693191	grid insert	PSH100	24203021
3	693192	cap	PSH100	24209025
4	693193	button	PSH100	13120107

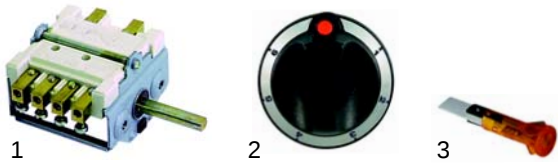 


Item	Order	Description	Model	OEM
1	300026	switch	PSH100	10010302
2	111552	knob		24016100
3	359140	signal lamp		10080004

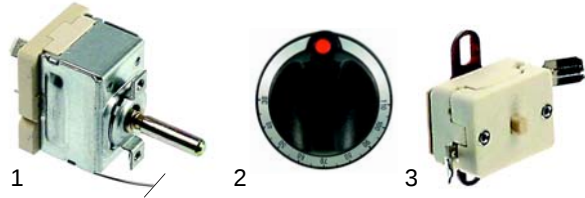 


Item	Order	Description	Model	OEM
1	375672	thermostat	PSH100	10100004
2	111541	knob		26106000
3	375673	safety thermostat		10100100

 
Gyros grills (gas)

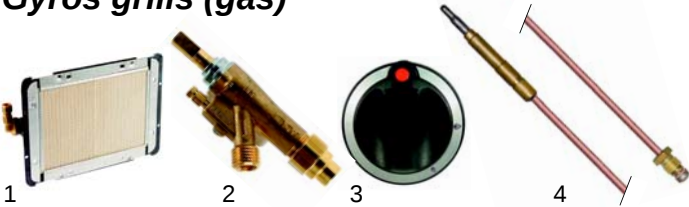

Item	Order	Description	Model	OEM
1	105586	burner	PDG202	11070001
2	106013	gas tap	PDG302/3	11030602
3	111775	knob	PDG302D/3D	
4	102034	thermocouple	PDG402/3	11060004

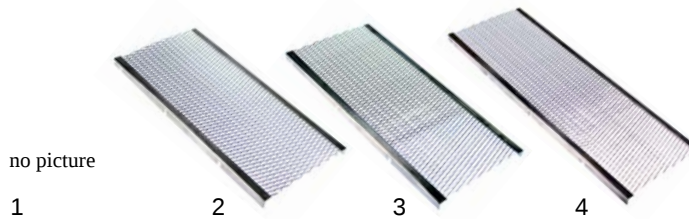 


Item	Order	Description	Model	OEM
1	105587	burner grid	PDG202	24000210
2	105588	burner grid	PDG302	24010210
3	105589	burner grid	PDG302D	24010410
4	105590	burner grid	PDG402	24020210

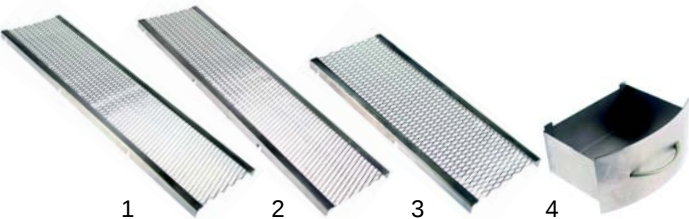 

Item	Order	Description	Model	OEM
1	105591	burner grid	PDG303	24010371
2	105592	burner grid	PDG303D	24010510
3	105593	burner grid	PDG403	24020310
4	693428	grease collecting tray	universal	24010310

 Gyros grills (electrical)

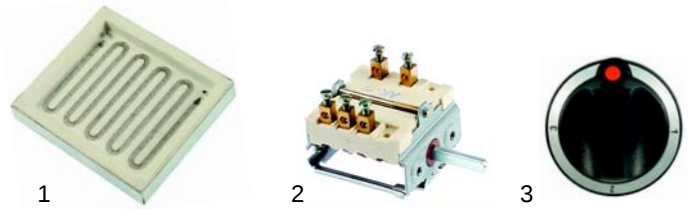


Item	Order	Description	Model	OEM
1	490142	750 W/230 V		24017550
2	300022	switch	PDE300	10010303
3	111540	knob	PDE400	24016101



Item	Order	Description	Model	OEM
1	693194	glass	PDE300	24019502
2	693195	glass	PDE400	24029502

 Gyros grills (mechanical)

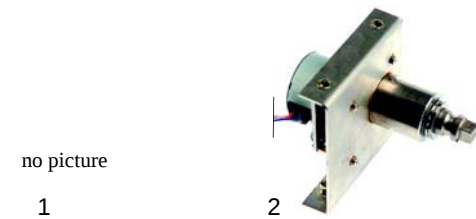


Item	Order	Description	Model	OEM
1	500606	motor/complete	PDG202/302/402	24011340
2	500607	motor/complete	PDE300/400	
			PDG203/303/403	24023040




Item	Order	Description	Model	OEM
1	500608	motor		10130104
2	346400	switch	PDG__	10010207
3	550672	lamp holder outlet	PDE__	10025101

 
Pizza ovens (electric)

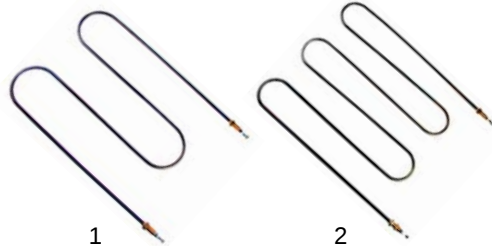


Item	Order	Description	Model	OEM
1	416865	1500 W/230 V (upper)	FMP100	22207023
2	416866	2250 W/230 V (center+lower)		22207024

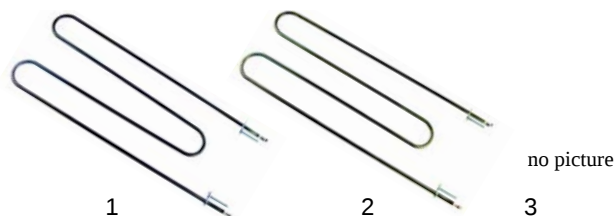 

Item	Order	Description	Model	OEM
1	416867	1000W/230V (upper)	FPE100/110	22317026
2	416868	1500W/230V (lower)	FPE200/210 FPE300/310	22317025
3	416869	500W/230V (heating furnace)	FPE010,110 FPE210,310	22317022

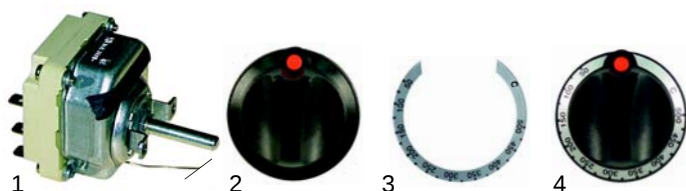 

Item	Order	Description	Model	OEM
1	375027	thermostat	universal	10100002
2	111542	knob	FMP100	24016106
3	111543	symbol		22206002
4	111544	knob	FPE__	22206000

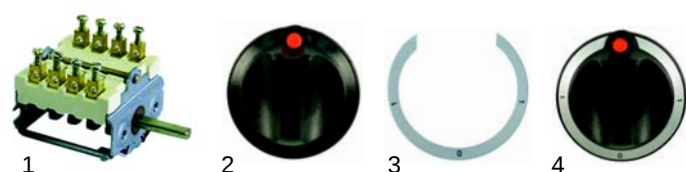 


Item	Order	Description	Model	OEM
1	300021	switch	universal	10010304
2	111542	knob	FMP100	24016106
3	111545	symbol		24106102
4	111546	knob	FPE__	24106100




Item	Order	Description	Model	OEM
1	301005	switch	FMP100	10010200
2	359140	signal lamp/yellow	FMP100	10080004
3	359138	signal lamp/red	FPE__	10080002
4	375257	safety thermostat		10100001
5	359712	lighting device for oven	FPE__	10080301




Item	Order	Description	Model	OEM
1	346401	switch/green	FPE__	10010112
2	346402	switch/red		10010113

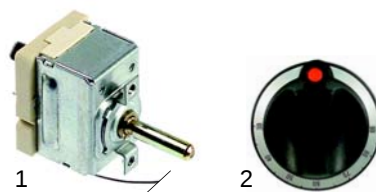 

Item	Order	Description	Model	OEM
1	375674	thermostat, 90°	FPE__10	10100003
2	111547	knob		24106110

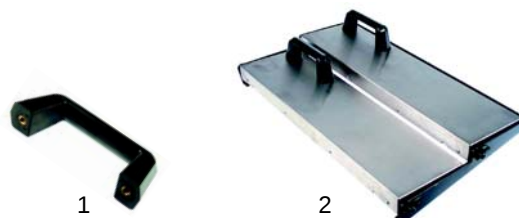 

Item	Order	Description	Model	OEM
1	693427	handle	FPE/FMP100	13120106
2	693196	door complete	FMP100	22200080

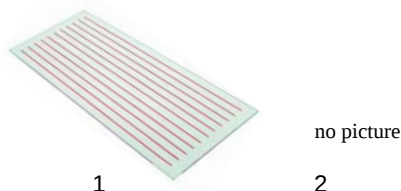 


Item	Order	Description	Model	OEM
1	693197	window glass	FPE__	22319033
2	693198	door complete		22300020



Item	Order	Description	Model	OEM
1	850062	firebrick	FMP100	22209053
2	850063	firebrick	FPE__	22319052

 Salamander (electric)

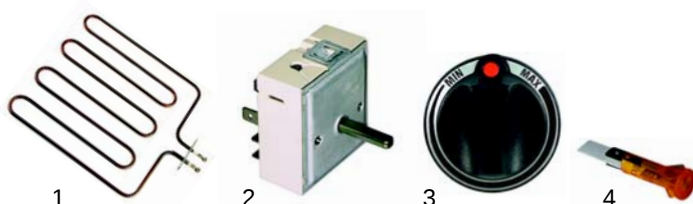

Item	Order	Description	Model	OEM
1	416870	1750W/230V		24507022
2	380015	energy regulator	PSE100 PSE200	10091000
3	111551	knob		24506020
4	359140	signal lamp		10080004