 
 


Spare parts suitable for: **ROKA**

Spare parts suitable for modular ranges

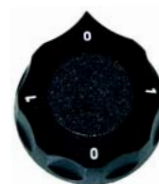

 
Spare parts suitable for small appliances and single devices

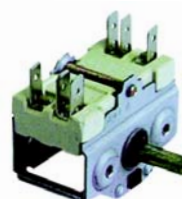

R

Suitable for Roka

Open tops (electric)

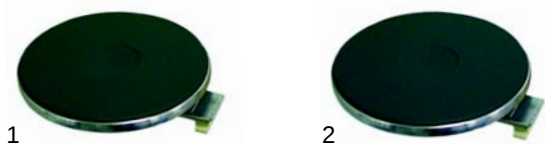

Item	Order	Description	Model	OEM
1	490016	2000W/230V	4804	8900371
2	490020	2600W/230V		8900370




Item	Order	Description	Model	OEM
1	300025	switch (7-tacts)	4804	8900220
2	110111	knob		-
3	359854	signal lamp		8900426
4	359606	glow lamp		-

Fry tops (electric)



Item	Order	Description	Model	OEM
1	418235	1600W/230V	1805	8900322
2	418234	1200W/230V	1807	8900323
3	359854	signal lamp	universal	-
4	359606	glow lamp		-

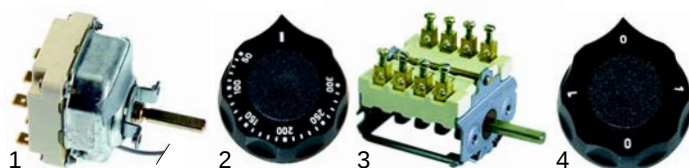 

Item	Order	Description	Model	OEM
1	375693	thermostat	1805, 1807	8900211
2	110114	knob, 300°C		-
3	300021	switch		8900302
4	110113	knob		-

Chargrills (electric)



Item	Order	Description	Model	OEM
1	415676	400 W/230 V	1505, 1507, 1509, 1511	8900326
2	211071	shelf		8900580
3	380213	contactor		8900310




Item	Order	Description	Model	OEM
1	380015	energy regulator	1505, 1507, 1509, 1511	8900215
2	110117	knob		-
3	359855	signal lamp/green		8900425
4	359854	signal lamp/yellow		8900426
5	359606	glow lamp		-


Bratt pans (electric)




Item	Order	Description	Model	OEM
1	418234	1200 W/230 V	2404, 2414	8900323
2	359855	signal lamp	2414	8900425
3	359606	glow lamp		-

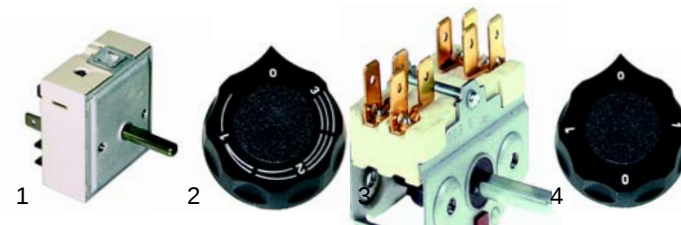 


Item	Order	Description	Model	OEM
1	380015	energy regulator	2404, 2414	8900215
2	110117	knob		-
3	300074	switch		8900301
4	110113	knob		-

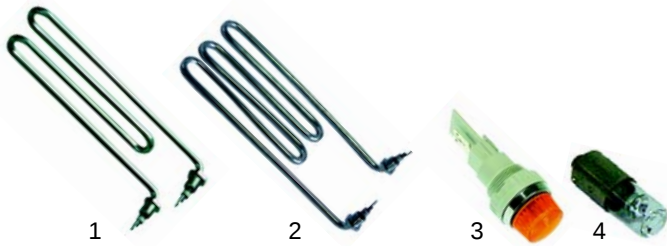 Bains-marie


Item	Order	Description	Model	OEM
1	415675	2000W/230V	2704 (old)	8900341
2	415375	3000W/230V	2707 (old)	8900342
3	359854	signal lamp	universal	8900425
4	359606	glow lamp		-

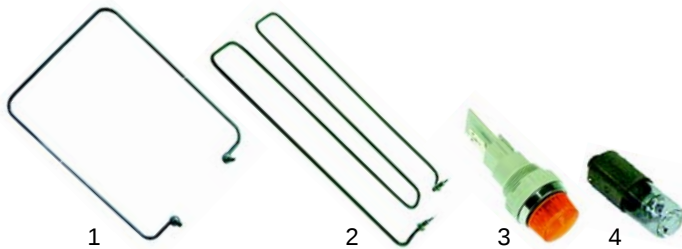 


Item	Order	Description	Model	OEM
1	415669	2000W/230V	2704 (new)	8900324
2	415672	3000W/230V	2707 (new)	8900325
3	359854	signal lamp	universal	8900425
4	359606	glow lamp		-

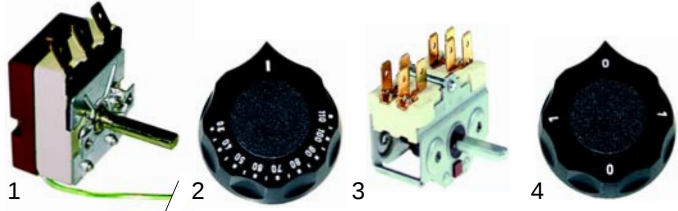 


Item	Order	Description	Model	OEM
1	375007	thermostat	2704, 2707	8900202
2	110116	knob		-
3	300074	switch		8900301
4	110113	knob		-

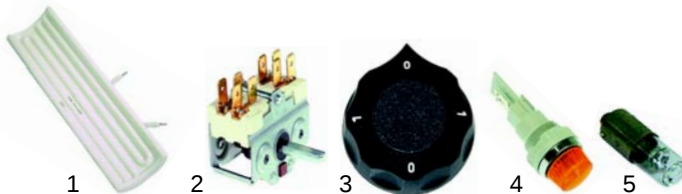 Chip scuttle tops


Item	Order	Description	Model	OEM
1	415103	650W/230V	3204	8900319
2	300074	switch		8900301
3	110113	knob		-
4	359854	signal lamp		8900425
5	359606	glow lamp		-

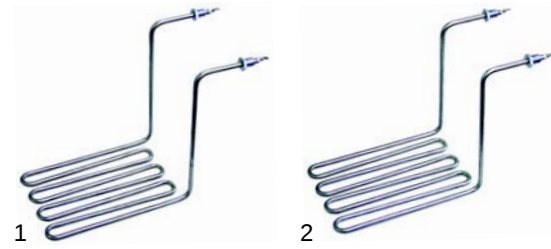 Fryers (electric)


Item	Order	Description	Model	OEM
1	415365	3300W/230V (outer)	old devices	-
2	415366	3300W/230V (inner)		-

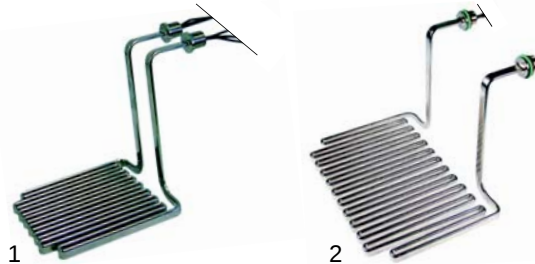 


Item	Order	Description	Model	OEM
1	415792	6000W/400V	1004, 1006	8900350
2	418237	9900W/400V	1005	8900351

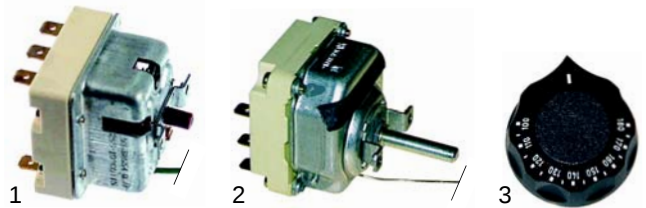 

Item	Order	Description	Model	OEM
1	375694	safety thermostat	1004, 1005, 1006	8900253
2	375512	thermostat		8900210
3	110115	knob		-

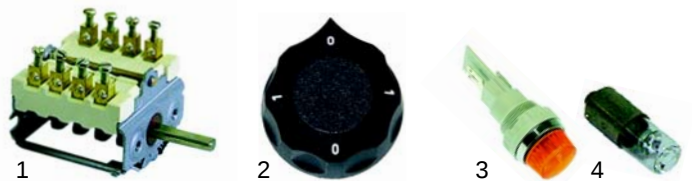 

Item	Order	Description	Model	OEM
1	300021	switch	1004, 1005, 1006	8900302
2	110113	knob		-
3	359854	signal lamp		8900425
4	359606	glow lamp		-

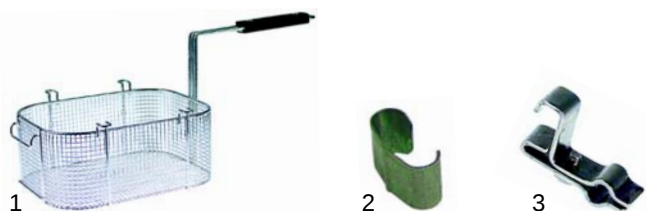 


Item	Order	Description	Model	OEM
1	970441	fryer basket		8900104
2	550004	capillary pipe clamp		8900541
3	550043	sensor clamp		8999998

R


Suitable for Roka

 Salamander (electric)

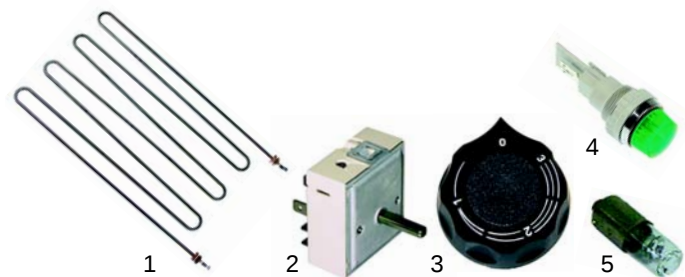


Item	Order	Description	Model	OEM
1	418236	2600 W/230 V	6397	3900328
2	380015	energy regulator		8900215
3	110117	knob		
4	359855	signal lamp/green		8900425
5	359606	glow lamp		8900425

 Hot cupboards

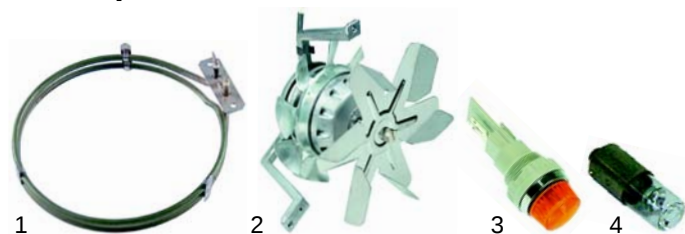


Item	Order	Description	Model	OEM
1	418240	1300 W/230 V		8900327
2	601151	motor/complete		8900360
3	359854	signal lamp		8900426
5	359606	glow lamp		-

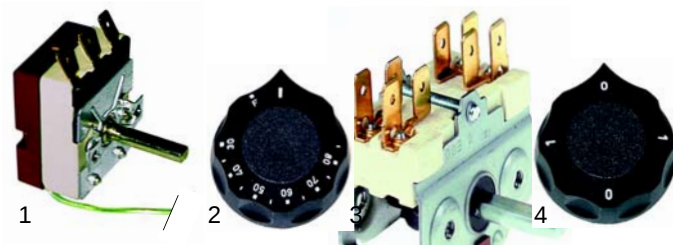 

Item	Order	Description	Model	OEM
1	375005	thermostat		8900203
2	110109	knob		-
3	300074	switch		8900301
4	110113	knob		-

 Food warmers

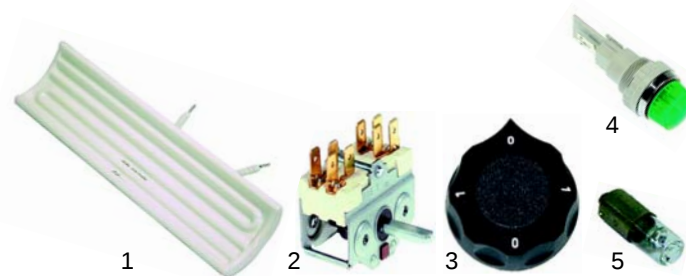

Item	Order	Description	Model	OEM
1	415102	400 W/230 V		8900380
2	300074	switch		8900301
3	110113	knob		
4	359855	signal lamp/green		8900425
5	359606	glow lamp		-